

X - MICRO

MusePod

Quick Start Guide

Copyright

Copyright 2004 by X-Micro Technology Corp., All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of X-Micro Technology Corp.

Disclaimer


X-Micro Technology Corp. makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase,

the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, X-Micro Technology Corp., reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or change.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Basic Operations



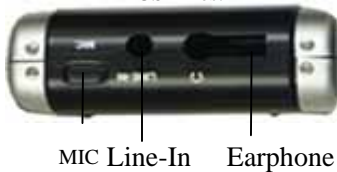

- **Power On** Press and hold the “Play/Pause/Power On” button
- **Play/Pause** In the playing status, press the “Play/Pause/Power On” button.
- **Stop Playing** Press the “Stop/Power OFF” button.
- **Fast Forward** In Music playing status, press and hold the “Right” button.
- **Fast Reverse** In Music playing status, press and hold the “Left” button.
- **Play Previous Track** In Music playing status, press the “Right” button.
- **Play Next Track** In Music playing status, press the “Left” button.
- **Power Off** Press and hold the “Stop/Power OFF” button.
- **Volume Adjustment** In Music playing or FM status, press the “Up/Down” button.
- **File Selection** In the file navigation status, press the “Right/Left/Up/Down/ Menu” button. Press the “Menu” button to enter the file navigation interface, press the “Right” button to enter a folder or select a file, press the “Left” button to exit the current directory, press the “Up/Down” button to select

the different file or folder, and press the “Menu” button to confirm.

- **Mode Switch** Press and hold the “Mode” button to enter the mode switch.
- **SRS** Press Mode key when play music, it will change to SRS mode
- **Section Definition** Press the “A-B” button.
- **Recording** Press and hold the “A-B” button.
- **Menu Display** Press and hold the “Menu” button.
- **Hold button On/Off**
- **Auto Scan FM Channel** Long press Play key in FM Radio Mode
- **FM Channel Memory mode** Press Mode Key in FM Radio Mode
- **Select Saved FM Channel** Press Left or Right to select channel
- **FM Radio Recording** Long Press A-B Key to record from FM Radio
- **Copy one file from USB Device by Host function** Long press Play key to copy one file
- **Copy all file in the USB device by Host function** Long press A-B Key to copy all file

How to Install Win98 Driver

1. Plug in the CD to CDROM, when you find a Install driver item from the interface



X - MICRO
Plug & fly

www.x-micro.com